

CRT SS 9900 expand freq operation

In power off status, press **【MENU】** + **【BAND】** together to open radio, turn **【PUSH】** to select HF. BAND, Freq Range: 28.0000-29.6950MHz

Freq Name	Channel No.	Freq Range	Remark
A	40CH	28.0000-28.1950MHz	
B	40CH	28.2000-28.3950MHz	
C	40CH	28.4000-28.5950MHz	
D	40CH	28.6000-28.7950MHz	
E	40CH	28.8000-28.9950MHz	
F	40CH	29.0000-29.1950MHz	
G	40CH	29.2000-29.3950MHz	
H	40CH	29.4000-29.5950MHz	
I	20CH	29.6000-29.6950MHz	Default

In power off status, press **【MENU】** + **【BAND】** together to open radio, turn **【PUSH】** to select CB. BAND, Freq Range:: 25.6150-30.1050MHz . *Press 【MENU】 for 3 seconds*

Freq Name	Channel No.	Freq Range	Remark
A	40CH	25.615-26.005MHz	Default
B	40CH	26.065-26.505MHz	
C	40CH	26.515-26.955MHz	
D	40CH	26.965-27.405MHz	
E	40CH	27.415-27.855MHz	
F	40CH	27.865-28.305MHz	
G	40CH	28.315-28.755MHz	
H	40CH	28.765-29.205MHz	
I	40CH	29.215-29.655MHz	
J	40CH	29.665-30.105MHz	

20140807 MODIFICATION V2