


AE4200EU Channel Options

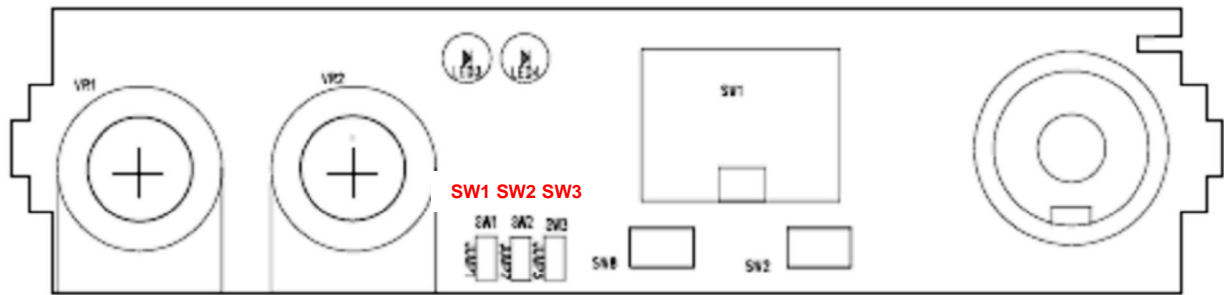

1. Jumper Positions

Note: H = no jumper, L = jumper install (short)

	SW2	SW1	
MODE 1	H	H	400CH AM/FM (BAND E AM40/FM80)
MODE 2	L	L	40/40 FM/AM 0kHz Offset
MODE 3	L	H	40/40 FM/AM
MODE 4 MULTI MODE	H	L	MULTI MODE (Default MULTI 1: 80/40 AM/FM)

2. CB Multi Standard (MODE4)

MODE 4	DISPLAY	
MULTI 1	D4	80/40 FM,AM
MULTI 2	EC	40 FM ONLY
MULTI 3	E	40 FM/AM
MULTI 4	PL	40 FM/AM 0kHz Offset
MULTI 5	U	40 AM/FM (CH1-40) 40 FM (UK CH 41-80)

Jumper SW3 installed --- MULTI LOCK

Changing the CB-Standard

1. Radio OFF
2. Press and hold the **down key** while power on
3. **up/down key** to select the **CB-Standard (d4,EC,E,PL,U)**
4. Power off /on, the display shortly shows the active CB-Standard "d4, EC, E, PL, U"

Remark: In selection %d+there are 80 CHs.

CH 1-40	Standard CB-Channels AM/FM (26.965-27.405MHz)
CH 41-80	Special UK Channels FM (27.60125-27.99125MHz)

3. 400CH MODE (MODE4)

Jumper SW3 must be removed

1. Radio OFF
2. Press and hold the **up key** while power on
3. **up/down key** for **band selection (A to J)**
4. power off /on

Remark: In Band %b+there are 80 CHs.

CH 1-40	AM/FM (26.965-27.405MHz)
CH 41-80	FM (26.565-26.955)